



Eat well, drink well and live well with Omega www.omegajuciers.com

COMMERCIAL CITRUS JUICER




PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR JUICER





JUICER SAFETY

 **DANGER** Electricity

 **GENERAL** Caution

 **DANGER** Risk of Electrical Shock

 **DANGER** Keep Hands Clear

 WARNING 	 WARNING 
<p align="center">Electrical Shock Hazard</p> <p>Plug into a grounded outlet.</p> <p>Do not remove ground.</p> <p>Do not use an adapter.</p> <p>Do not use an extension cord.</p> <p>Failure to follow these instructions can result in death, fire or electrical shock.</p>	<p align="center">Moving Parts!</p> <p>Do not put spoons or other utensils in container when juicing. Use extreme caution not to contact moving parts with hands during operation.</p> <p>Failure to follow these instructions can result in broken bones, cuts or other injuries.</p>

FAILURE TO ADHERE TO THESE WARNINGS CAN RESULT IN FIRE, SERIOUS INJURY, ELECTRICAL SHOCK AND/OR DEATH

 **WARNING** 

JUICING CONES ROTATE WITH SUBSTANTIAL FORCE. USE EXTREME CAUTION WHEN PRESSING FRUIT ON TO CONES. NEVER CONTACT MOVING PARTS DIRECTLY WITH HANDS.

Technical Services

For assistance or replacement parts, call
 Technical Service at
 Toll Free: 1-800-633-3401

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- a) Read all instructions
- b) To protect against risk of electrical shock do not put body or supply cord in water or other liquid.
- c) Close supervision is necessary when any appliance is used by or near children
- d) Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- e) Avoid contacting moving parts
- f) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment
- g) The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- h) Do not use outdoors
- i) Do not let cord hang over edge of table or counter.
- J) Always make sure the juicing cones are free of obstructions before turning the unit on.
- k) Be sure to turn switch to OFF position after each use. Make sure the motor stops completely before disassembling.
- l) Do not put your fingers or other objects on to the juicer opening while it is in operation. Turn the motor off and disassemble juicer to remove any pulp.

GROUNDING INSTRUCTIONS

This appliance must be grounded while in use to protect the operator from electrical shock The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle

EXTENSION CORDS

Use only 3-wire extension cords which have 3-prong grounding-type plugs and 3-pole cord connectors that accept the plug from the appliance. Use only extension cords having an electrical rating not less than the rating of the appliance Do not use damaged extension cords. Examine extension cord before using and replace if damaged. Do not abuse extension cord and do not yank on any cord to disconnect Keep cord away from heat and sharp edges.

JUICER OPERATION

To operate the juicer, proceed as follows



Step 1. Ensure the commercial citrus juicer is correctly assembled with a container placed under the juice spout before juicing.



Step 2. Cut the citrus fruit in half by cutting across the diameter, and not tip to tip, to ensure more efficient juicing. For the best contact with the fruit cone, smooth the outside of the fruit by trimming any tip ends such as the ends of a lemon or tangelo.



Step 3. Plug the power cord into a properly grounded power outlet and then switch the on/off button to ON. This begins operation of the citrus juicer.



Step 4. Place citrus fruit half with the cut side down onto the juicing cone. Be careful not to press too hard. Use caution not to contact moving parts with your hands.



Step 5. The motor will automatically start and the juicing cone will begin to rotate. The juicer will be extracted from the fruit and flow through the juice spout into the container. The pulp and seeds will collect in the stainless steel filter.



Step 6. The household citrus juicer juices very quickly so each fruit half will be juiced in a few seconds. To automatically stop the motor, lift the fruit up.

Step 7. Remove the used fruit from the juicing cone. Empty excess pulp and seeds from stainless steel filter as required. Repeat steps 4-7 to continue juicing.

NOTE: the stainless steel filter should be emptied when full with pulp and seeds. The filter can be emptied during juicing by switching the citrus juicer "OFF" and carefully removing the juicing cone and filter. Clean and replace stainless steel filter and juicing cone before continuing to juice. Do not allow the stainless steel filter to overfill as this may prevent correct operation or damage the unit.

CARE, CLEANING AND STORAGE

- Always ensure that the juicer is switched OFF and the plug is removed from the power outlet before cleaning, disassembling, assembling and storing the appliance
- Follow these instructions to clean all surfaces or parts that come into contact with food during juicing:

1 Immediately after each use rinse removable parts under warm water to remove wet pulp allow parts to air dry before reassembling.

2 For thorough cleaning-after disassembling the appliance, all removable parts should be washed in tepid soapy water or on the top shelf of the dishwasher. The motor base should be wiped with a soft, damp cloth. All parts should be dried thoroughly before reassembling. Do not place base of unit in the dishwasher.

3 Store the cleaned and reassembled citrus juicer in an upright position in a cool, dry place. Never place any items on the top of the citrus juicer.

4 Any other servicing should be performed by an authorized service representative.

NOTES: 1 Rinse or wash all removable parts immediately after use. Dried citrus pulp is difficult to remove and may stain. If any staining does occur, wipe the affected parts with undiluted dishwashing liquid, rinse and dry thoroughly.

2 Do not soak the stainless steel filter or other removable parts in bleach. Never immerse the motor base in water or any other liquid. Do not use harsh abrasives.

TROUBLESHOOTING

Possible Problem	Easy Solution
Machine will not work	Switch not "ON"
Machine will not work	Hand not lowered
Machine will not work	Cone or dome not assembled properly
Motor stalls, the juicing cone will not spin.	Raise hand, re-lower hand slowly for the first few seconds then press down firmly.

Replacement Parts

For replacement parts, call toll free: 1-800-633-3401



Omega Products, Inc.
6291 Lyters Lane
Harrisburg, PA 17111-4523, U.S.A
PH: (717) 561-1105
FAX: (717) 561-1298