









Extract the Max



INTRODUCING the Champion Juicer Attachment
for Wheat Grass & Leafy Greens!

Greens Attachment - Operating Instructions


ASSEMBLY INSTRUCTIONS
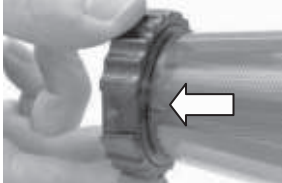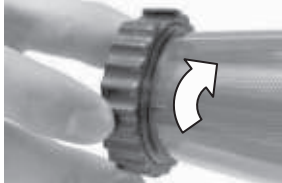
<p>1. Install the o-ring seal over the hub insert. O-ring should have a light coating of olive oil or other type vegetable oil prior to installation.</p>		
<p>2. After applying a light coating of vegetable oil to the motor shaft, align the arrow at the back of the auger to the flat on the motor shaft and slide the auger onto motor shaft.</p>		
<p>3. Slide screen insert into green attachment body from the back so that insert side opening is in line with the feeder tube of the body. The grooves in the insert must be aligned to the body ribs. If the fit is tight, recheck the alignment.</p>		
<p>4. Slide the back (ribbed- cone end) of the restrictor assembly over the front end of the body and with the center of the restrictor groove aligned with the rib on front of body, slide the restrictor into the screen insert front opening. Lock the restrictor assembly into position by rotating counter-clockwise (about 60 deg) until it stops.</p>		


Greens Attachment - Operating Instructions

ASSEMBLY INSTRUCTIONS

5. Assemble green attachment assembly to the hub by aligning the body opening to the hub lugs and rotate counter-clockwise to the stops. Note: the body feeder tube must be at the top.

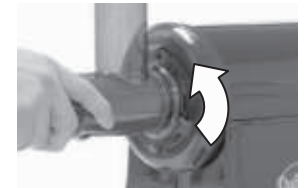

6. Slide the deflector into the restrictor nut with deflector tab aligned to restrictor groove, until the tab snaps into the locked position.

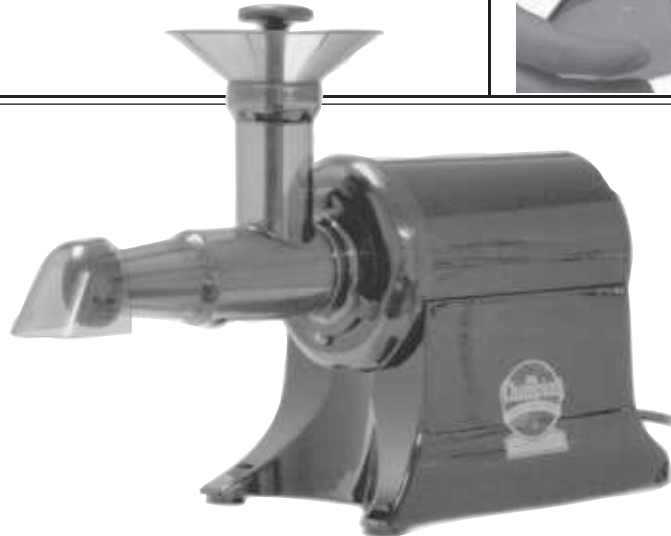

Greens Attachment Parts



AUGER



DEFLECTOR



TAMPER



RESTRICTOR



BODY



FUNNEL



SCREEN INSERT

JUICING PREPARATION

JUICING PREPARATION

1. Prepare the produce to be juiced. This includes cleaning and breaking or cutting into suitable size feeding portions. Generally, for any material, if the produce has the tendency to plug or jam the feeding tube, requiring additional pressure to engage auger, then the amount is too large and should be reduced. When preparing the wheatgrass, the length of the grass should not exceed 4 inches.
2. Assemble the funnel to the feeder tube of the body.
3. Place bowls under the green attachment body to receive the juice and pulp.

JUICING

1. Turn on the juicer.
2. When juicing wheatgrass, feed no more than about a 3/4 inch diameter bundle at one time. For all other materials, try to avoid excessively large feeding portions that might jam the feeder tube of the body. Generally, LESS IS BETTER. For all materials, feed the thicker or stiffer parts down for engagement with the auger. DO NOT EXCLUDE THE STALKS; they help clear

out the chamber. Note: To minimize wear to internal parts, JUICER SHOULD NOT BE LEFT RUNNING WHILE NOT JUICING.

3. Using the green tamper, push the juicing material down the feeding tube and into the auger using an up and down motion. When juicing wheatgrass, it may take a few seconds for the wheatgrass to engage the auger, signified by a distinctive “growling” sound. Most other materials will process more quickly. NOTE: Do not feed any additional wheatgrass material into the chamber until the “growling” sound is heard, indicating that the body chamber is now empty. Whenever the processing does not occur in a timely manner (more than about 10 seconds), introduction of a small piece of pulp should be used to clear the chamber before proceeding. NOTE: Overfeeding of the juicing material will result in additional stress on the parts and can stall the motor.

4. In case of any unusual sounds, smells, heated pulp or motor stall, turn off the juicer immediately. Disassemble parts, rinse, inspect and reassemble.

5. Introduction of the pulp through the

juicer for a SECOND PASS will produce about 10% to 15% more yield. With wheatgrass, introduce no more than about a 2 inch piece of pulp at one time. NOTE: Additional passes are generally non-productive, and are not recommended.

DISASSEMBLY & CLEANING INSTRUCTIONS

1. Disassemble parts in reverse order of assembly.
2. Rinse all parts, clean them with the cleaning brush using dish detergent, re-rinse and inspect. NOTE: The screen insert's screen will probably require more intense brushing inside and out to loosen debris, depending on the material juiced.
3. Rinse the hole in the back of auger. Clean hole with small bottle brush, if necessary, to loosen debris. Place auger with hole-end down and all other parts in a drying rack to air dry.
4. NOTE: All of the green attachment parts are dishwasher safe (upper shelf). The screen attachment's screen may require additional brushing and rinsing prior to placement in dishwasher.

TROUBLESHOOTING

SYMPTOM	CAUSE	SOLUTION
Motor won't start.	- Switch is off or power supply bad.	- Check curcuit breaker and power cord.
	- Magnet in body flange is missing.	- Replace magnet.
	- Proximity safety switch is bad.	- Replace proximity switch.
Motor stalls.	- Auger hole is plugged.	- Clear auger hole.
	- Restrictor not in full locked position.	- Remove restrictor, rinse, inspect and reassemble.
	- Machine was overloaded.	- Disassemble, clear blockage, rinse and reassemble.
	- Juicing material too hard or tough.	- Discontinue juicing of that material.
	- Wrong restrictor installed*.	- Replace with the correct restrictor.
	- Restrictor is worn.	- Replace restrictor.
Excessive or unusual noise.	- Auger hole is plugged.	- Clear auger hole.
	- Restrictor not in full locked position.	- Remove restrictor, rinse, inspect and reassemble.
	- Wrong restrictor installed*.	- Replace with the correct restrictor.
	- Juicing material too hard or tough.	- Discontinue juicing of that material.
Excessive heat in juice.	- Auger hole is plugged.	- Clear auger hole.
	- Restrictor not in full locked position.	- Remove restrictor, rinse, inspect and reassemble.
	- Restrictor is worn.	- Replace restrictor.
	- Wrong restrictor installed*.	- Replace with the correct restrictor.
	- Juicing material tough or abrasive.	- Discontinue juicing of that material.
Low yield.	- Juicing material abnormally dry.	- Replace the material with a fresher one.
	- Restrictor is missing.	- Install restrictor.
	- Wrong restrictor installed*.	- Replace with the correct restrictor.
	- Restrictor not in full locked position.	- Remove restrictor, rinse, inspect and reassemble.
Juice spraying or spitting.	- Deflector not installed.	- Install deflector.
Juice Leaking from back of body.	- Body seal missing.	- Install seal.
	- Body seal damaged.	- Replace seal.
Body will not assemble to hub.	- Wrong restrictor installed*.	- Replace with the correct restrictor.

* If juicer serial number starts with "CM", contact Plastaket Mfg. Co. for the correct restrictor. If juicer serial number starts with "OCM", use green restrictor instead of black restrictor.

Limited Warranty

PLASTAKET MANUFACTURING COMPANY, INC. 6220 HIGHWAY 12, LODI, CA 95240, (209) 369-2154

The Greens attachment, except as noted below, is warranted by Plastaket Manufacturing Company, Inc. (Plastaket) only to the original consumer or other person for whom the original consumer purchased it as a gift, to be free from defects in material or workmanship under normal use for a period of one (1) year from the date of its original purchase (date of purchase).

If there should be a defect covered by this warranty within the warranty period, Plastaket will replace the defective part, free of charge, provided it is properly packaged and delivered to Plastaket. Within the Contiguous United States only, the freight will be paid by Plastaket for up to 30 days from date of purchase. Method of freight will be at the discretion of Plastaket. This warranty does not cover loss or damage due to abuse, mishandling, alteration, accident, failure to follow operating instructions, or damage caused by parts or service not authorized by Plastaket.

Plastaket will not be liable for commercial consequential or incidental damages. Since some states do not allow this limitation, it may not apply to you.

If the serial decal is removed from the greens attachment body, the warranty is null and void.

Any part damaged by a cause not within the coverage of this warranty may be purchased from Plastaket at the current list price.

In case of damage during shipment of your new Greens Attachment,

do NOT send the attachment back to Plastaket. Immediately report such damage to the delivering carrier and have the carrier fill out an inspection report. Contact the place of purchase for further instructions. This warranty provides specific legal rights and you may also have other rights which vary from state to state.

Any communications with Plastaket regarding this warranty must contain the following information:

Any communications with Plastaket regarding this warranty must contain the following information:

- 1) Your name and present address
- 2) Attachment serial number
- 3) Copy of the dated purchase receipt
- 4) Name and address of the dealer
- 5) Description of the problem
- 6) If damaged during shipment, the name of the carrier

Date of Original Consumer Purchase* _____

Green Attachment Purchased from _____

City _____ State _____ Zip _____

**Requires a copy of the dated purchase receipt.*

Important - Please complete and return the Warranty Registration Card to Plastaket within 30 days of the date of original consumer purchase, or receipt as a gift. Removal of or rendering serial number illegible on juicer voids your warranty.

YOU MAY REGISTER ONLINE AT WWW.CHAMPIONJUICER.COM.

Warranty Registration Card

Please complete registration, detach, fold, seal and mail to Plastaket Manufacturing Company Inc. or you may register online at www.championjuicer.com within 30 days after the date of original consumer purchase.

PLEASE WRITE CLEARLY.

PRINT SERIAL NUMBER HERE

Date of Original Consumer Purchase _____ Date this Card was mailed to Plastaket _____

Name of Purchaser _____

Street Address _____ City _____ State _____ Zip _____

Champion Juicer purchased from _____

Street/Web Address _____ City _____ State _____ Zip _____

The following requested information (optional) is for Plastaket's use only and will not be shared with any other companies or organizations. Your cooperation is appreciated.

Sex: M F Age: Less than 21 21-40 41-60 61-80 80 or older

Marital Status: M S Number of children in household (under 18): _____

Annual Income (optional): under \$40,000 \$40,000 - \$70,000 \$71,000 - \$100,000 over \$100,000

How did you hear about the Champion Juicer? Internet Friend/Family Brochure Other _____


Why did you purchase a juicer? Health Food Preparation Business Use Other _____

Why did you purchase a CHAMPION juicer? Appearance Price Quality Warranty Other _____

PLACE
STAMP
HERE

Plastaket Manufacturing Co., Inc.
6220 E. Highway 12
Lodi, California 95240

FOLD

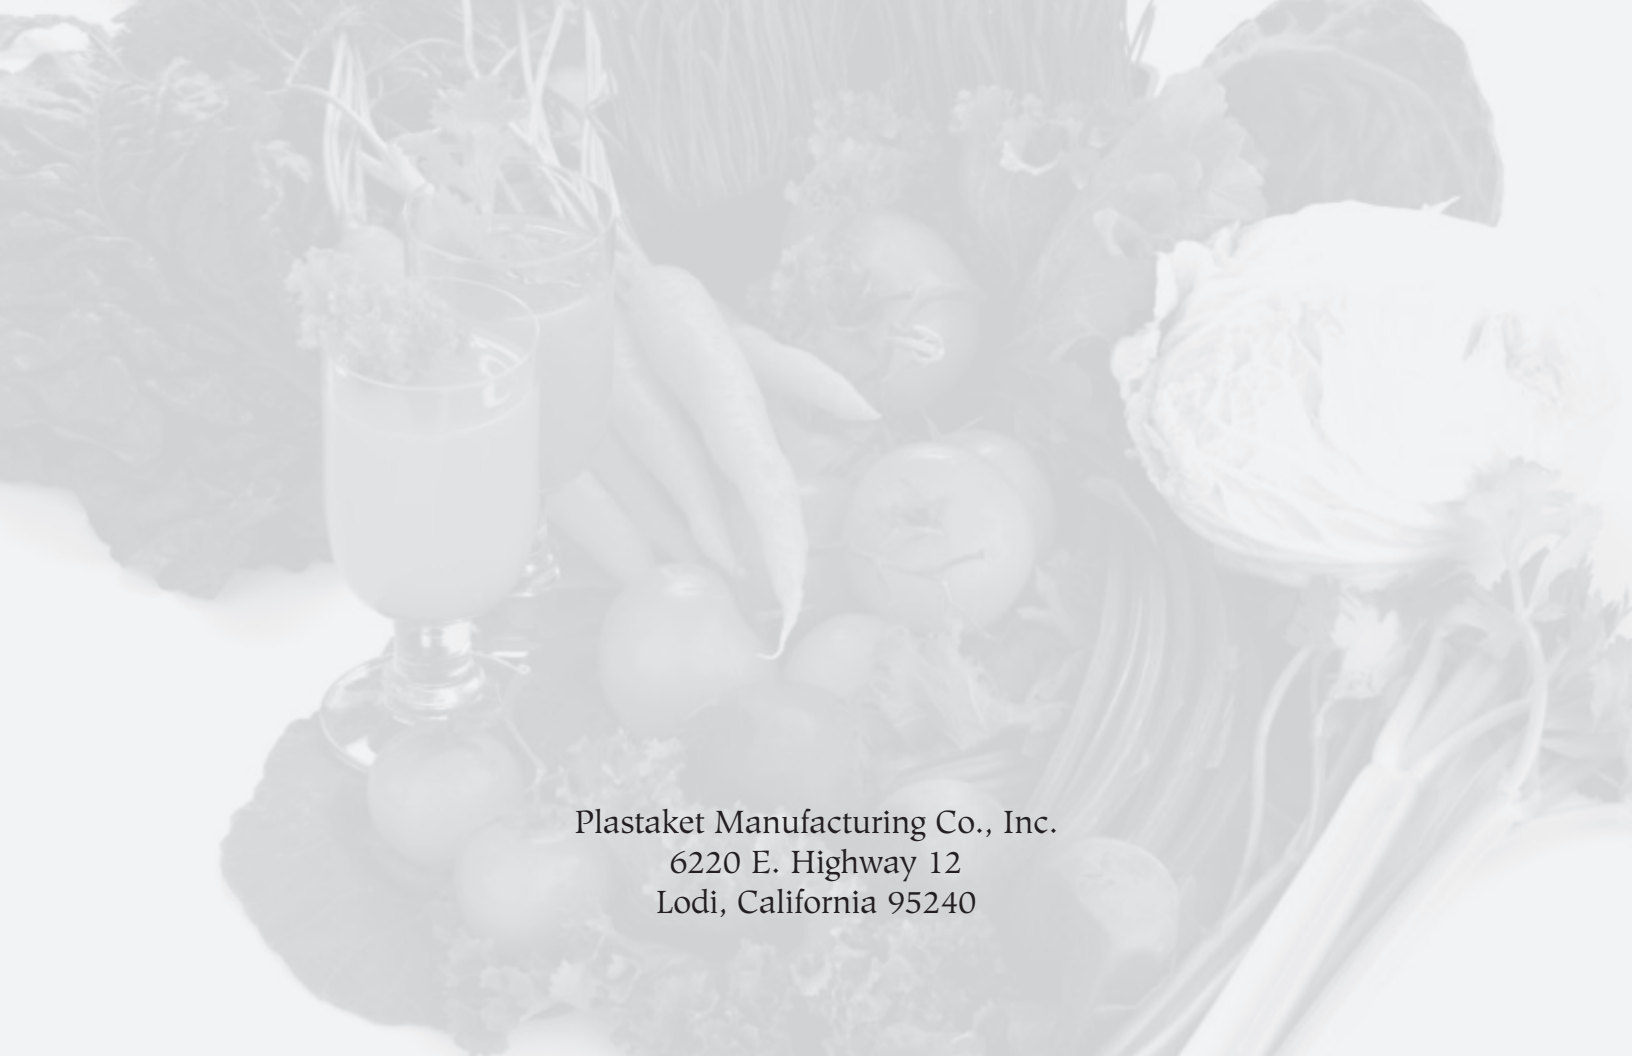

Plastaket Manufacturing Co., Inc.
6220 E. Highway 12
Lodi, California 95240